

Proper Refilling of Cartomizers

- 1: Remove the white cap at end of Cartomizer, remove the washer inside of Cartomizer.
- 2: , hold the cartomizer at a slight angle so you don't get fluid in the center hole and put in about eight drops of e-liquid while turning the cartomizer to get liquid around the batting evenly.
- 3: Set the cartomizer down standing up on the threaded end and leave it sit for at least twenty minutes to allow the liquid to soak in.
- 4: Repeat step 2 with another eight drops.
- 5: Replace the washer with bevel side down and replace the white end cap. It is best at this point to stand the Cartomizer up on the threaded end for at least an hour or two before using again to allow the liquid to fully soak in. Before installing a refilled cartomizer on a battery make sure there is no liquid leaking from the threaded end. This can damage a battery or switch.

We recommend filling three or more at a time then install the seals to have a supply of filled cartomizers on hand.

Although there are many ways shown on UTUBE to refill cartomizers we feel this method has less waste and less cleanup.

Proper Refilling of Cartridges

Cartridges are used with a separate atomizer on models such as the DSE801, DSE901, DSE103, M401, 510 and RN4081. Some of these models can also use a cartomizer which is a cartridge and atomizer built into one unit. Both can be refilled.

To refill a cartridge hold the cartridge upside down, you will see a porous material in the large opening of the cartridge. Add about 4-5 drops of e-liquid into the material and give it a couple of minutes to adsorb. Then add a few more drops (4-5), most cartridges hold about 6-10 drops which will give you about 20-35 puffs. The filled cartridge should not have liquid puddled in the material. If you get too much liquid in the cartridge you can turn it over on a paper towel to drain a small amount out, the liquid should be suspended in the material. Too much liquid in a cartridge can flood the atomizer and get into the battery usually causing the battery switch to fail. Check on Utube for video instructions.

On the DSE103 and RN4081 cartridges the liquid cup in the cartridge shell can be pushed up to the top with a bent paper clip for better access for filling.